


## Circulating airflow ceiling fan G-314D/S-314D







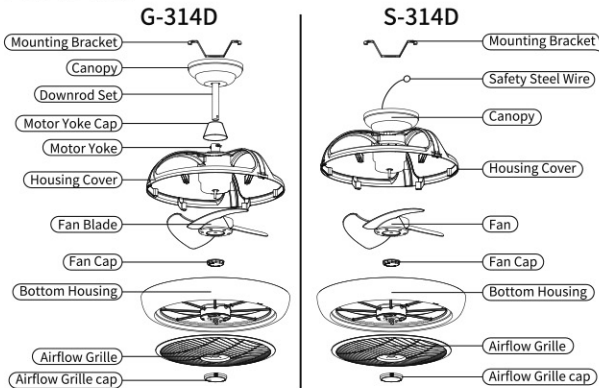

### Safety Attention

1. Voltage: 100~240V, do not allow change the voltage characteristics usage.
2. Base on the safety, using other brands' fan components to collocate installing with our fan is forbidden.
3. Circulating airflow ceiling fan must fasten on the ceiling, and it should do the pull test which can sustain at least 12 kg, and then it can do the following installation.
4. Please turn off the power before installation in order to avoid getting the electric shock.
5. Please keep the suspending areas of fan to be dry.
6. Mounting Bracket is must be fasten when installing the fan.
7. Use the addition devices for power connection from the supply having a contact separation of at least 3mm in all poles.
8. The power wiring specification must use the wire sectional area  $\geq 0.75\text{mm}^2$ .
9. The appliance is to be installed so that the blades are more than 2.3m above the floor.
10. Please install the fan must by the person who has the electrical certificated and do not allow install, move or reload the fan by the user. It might be occurred the accident like fall down the fan, electric shock or fire by the unsuitable installation.
11. This product should connect with the earth wire, and the installation engineering should implement by local laws and regulations.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
13. Children shall not play with the appliance.
14. Cleaning and user maintenance shall not be made by children without supervision.

### Part List



### Accessories

Item	Illustration	Specification	Quantity	function
Remote Controller		145 X 45 X 30	1	Control the fan
Battery		AAA	2	Remote controller uses
Round head Phillips Tapping Screw		$\varnothing 3 \times 16$	2	Fix the remote controller holder
Metal Expansion Screws		5/16"-18x1.4"	2	Fix the mounting bracket
Wood Screws		10#x35	4	Fix the mounting bracket
Hook		19x16x1.5T	1	Fix the safety steel wire
Connecting Terminal		P2 Orange	3	Fix the mounting bracket
Manual		A4	1	Operation instruction

Please read the operation manual before use.  
 Read and retain this manual for future reference.


# Installation

## • Mounting Bracket installation:

### Installing in the wooden ceiling :

Please use wood screws to lock the mounting bracket on the wood or attachment angle (angle bar/section or beam), which used with decoration. (The screws accessories includes the hook, please use hook and wood screws to install into the wood ceiling together and this is for hooking the Safety Steel Wire.


★Please note that S-314D must use hook to do installation.

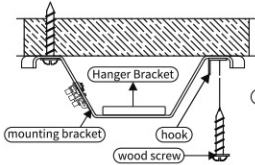


### Installing in the wall ceiling/ Installing in the Cement ceiling :

Please use an electric drill with ø8mm to drill about 40mm depth, and installing the expansion screws into the cement ceiling, and then please upload the nut of the expansion screw and lock the mounting bracket by using this nut. (The screws accessories includes the hook, please use hook to install into the ceiling together and this is for hooking the Safety Steel Wire.


★Please note that S-314D must use hook to do installation.

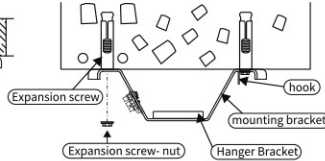


[Step 2] Please put the electric wire pass through the Motor Yoke Cap, Canopy and Downrod Set in sequence.

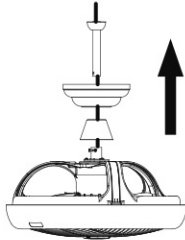

[Step 4] : Please insert the cotter pin into the end of parallel pin and use screws to lock both sides indeed for avoid shaking the downrod.

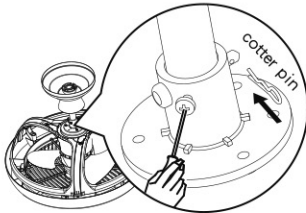


[Step 6] Please use the groove of hanging ball to install with the protrusion of mounting bracket indeed, and the purpose is to avoid sliding.

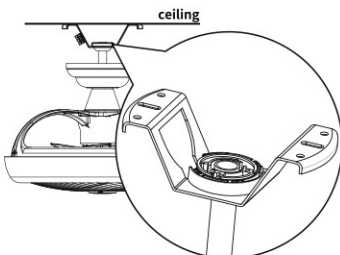


## •G-314D Installation


[Step 1] Please take off cotter pin and withdraw the straight pin/parallel pin.

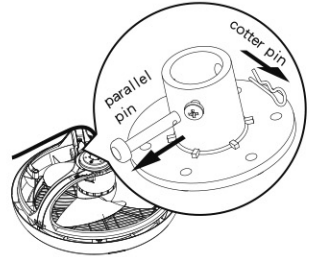


[Step 3] Please put the downrod into the motor yoke and then use parallel pin to lock with these parts.

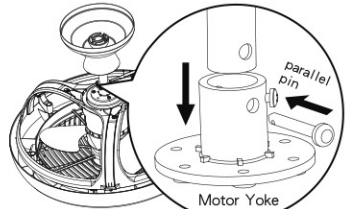


[Step5] Please use motor yoke cap to cover the motor yoke indeed.

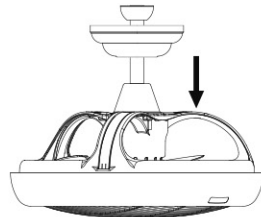


[Step7] Please put core wire into terminal hole and use the flathead screwdriver to lock it.

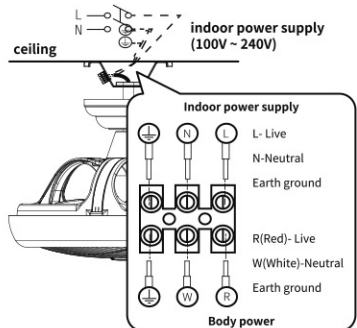

[Step 8] Please put the mounting bracket with screws into the canopy and twisting it into the groove of canopy, and then lock these screws indeed.

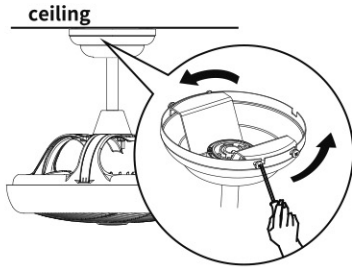


[Step2] Please put core wire into terminal hole and use the flathead screwdriver to lock it.

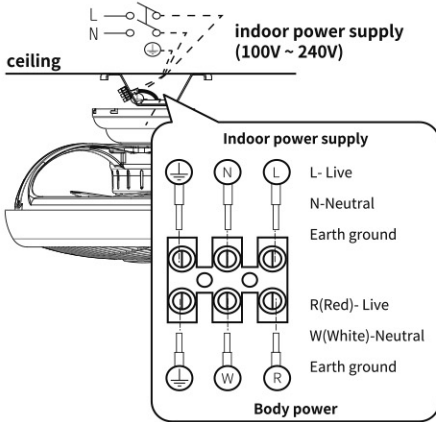


## •S-314D Installation

[Step1] Please use safety steel wire to fasten the hook indeed.

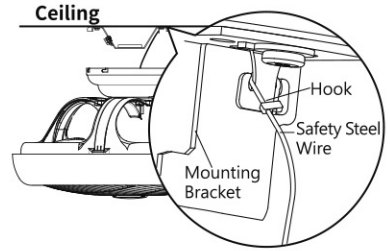


[Step3] Please put the mounting bracket with screws into the canopy and twisting it into the groove of canopy, and then lock these screws indeed.

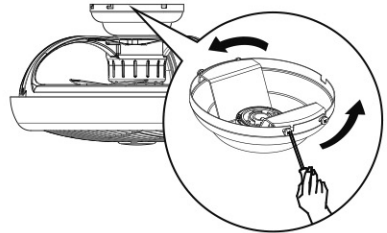


## Cleaning and Safety Attention

### • Fan blade cleaning

[Step1] Make sure turn off the power before maintenance, and then please take off the airflow grille cap and the airflow grille. °

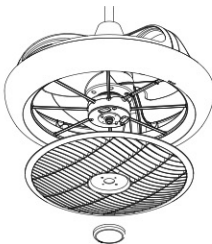


[Step2] Do not use the corrosive detergents to wipe the fan and main body, and the fan can be wiped from underneath or upside.

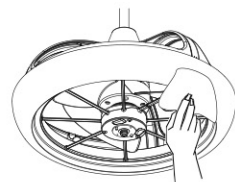

# Breakdown Repair

# Dimension Unit : mm


Phenomena	Check	Method
Press the remote controller, but it does not have any responses, also the fan cannot run.	Fan cannot connect with power.	Please check the plug and power.
	If the indicator light of the remote controller do not work, and it means that the battery is out of electricity.	Please replace the battery.
	The receiver is unusual.	Please ask store to repair.
After pressing the remote controller, and it has response (has "Beep sound"), but the fan cannot run.	The remote controller is unusual.	Please ask store to repair.
	The motor is unusual.	Please ask store to repair.
After pressing the remote controller, and it has response (has "Beep sound"), but the airflow grille cannot run.	Synchronous motor is unusual.	Please ask store to repair.
	The place of the fan is not stable.	Please ask store to repair.
Unusual noise from operation	The airflow grille has the friction with main body.	Please re-fix the airflow grille.
	The fan cap is losing.	Please lock the fan cap.
	The fan has too much dust.	Please clean it.
	The motor bearing is damage.	Please ask store to repair.
The indicator light of the main body do not work .	The main board wiring is loose.	Please ask store to repair.
	Main board is unusual.	Please ask store to repair.
The main body wavers over standard design when it operates, which the main body is inclined.	The installation is not certainty.	Please ask store to repair.

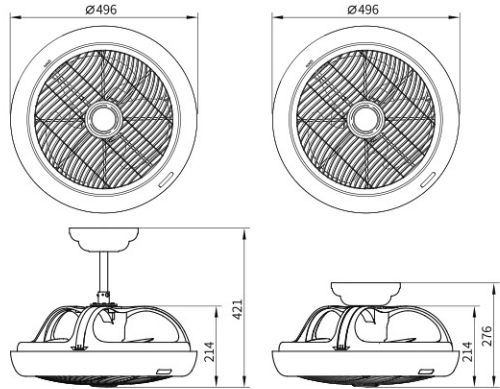

The figure shows the dimension of G-314D

The figure shows the dimension of S-314D

## Remote controller functions      Main Body indicator function

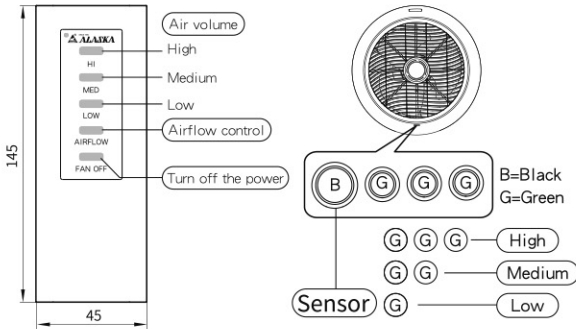

## Specification

Circulating airflow ceiling fan			
Model	G-314D	S-314D	
Voltage	100-240V 50/60 Hz		
Speed	High	Medium	Low
Power Consumption (W)	25	14,5	8,5
Air Flow (m <sup>3</sup> /H)	7218	5232	3234
Noise (dBA)	56	50	40
Weight (kg)	3,8		3,4
Frame Size (mm)	Ø496x421	Ø496x276	

## Warranty Card

Purchase Date	Date :	Production Serial No.	
Store Stamp		<p>Thank you for purchasing. There are two years for free service of warranty for main component (like fan motor), and other components for a year free service of warranty from beginning of purchasing.</p> <p>But the following conditions are included in free service and cost and service must be charged.</p> <ol style="list-style-type: none"> <li>1.The main component is fan motor, and other components are the general components.</li> <li>2.Do not login in our website or present this warranty without purchase date and store stamp.</li> <li>3.The damage is by the abnormal operation or errors or without regular maintaining of instruction manual.</li> <li>4.The breakdown causes by the users do the disassemble themselves, or modify the machines or replace the parts of non-original.</li> <li>5.The damage is by moving or delivering of purchaser after installation.</li> <li>6.The damage is by natural disasters.</li> </ol> <p>※The description of warranty which after repairing.</p> <ol style="list-style-type: none"> <li>1.Do the repair during the warranty period, the product should have the rights as the same as the warranty period.</li> <li>2.Out the warranty period doing the repair, the warranty of the repair components is for 3 months.</li> </ol> <p>※Instruction manual must be passed to user.</p> <ul style="list-style-type: none"> <li>● The installation way is very important; please store or plumber shop to do.</li> <li>● If the electric wires are damaged, it only can be replaced by manufacturer or agency or plumbers to do it in order to avoid danger.</li> </ul>	