

AR-2 Operation Manual with Warranty Card



Please read this manual thoroughly before using and save it for future reference.

Set up your device

Wi-Fi Module is referred to as “device” in the following sections.

1. Download the “Ultron Utility” App from the App Store or the Google Play Store.



2. Sign in with your Google Account > Create [Location Name] > Tap [Scanning Button] in the bottom of the Dashboard > Scan the QR code on the device.
3. Make sure the device is installed > Back to the App Dashboard, complete the Wifi setting by following the remaining steps on the App.
4. The device is connected to the network when the device icon has moved from [Unactivated Area] to [Devices]. The LED light of the device also visually illustrates its status; the device is connected when the light turns green steadily.

App Dashboard

Location Name

My Home ▾
Environment info

Unactivated Area

Unactivated

Sensor

Switch

Outlet

Scenes


Scenes

+

Scanning Button

Devices

Tap to scan the QR code on the device.

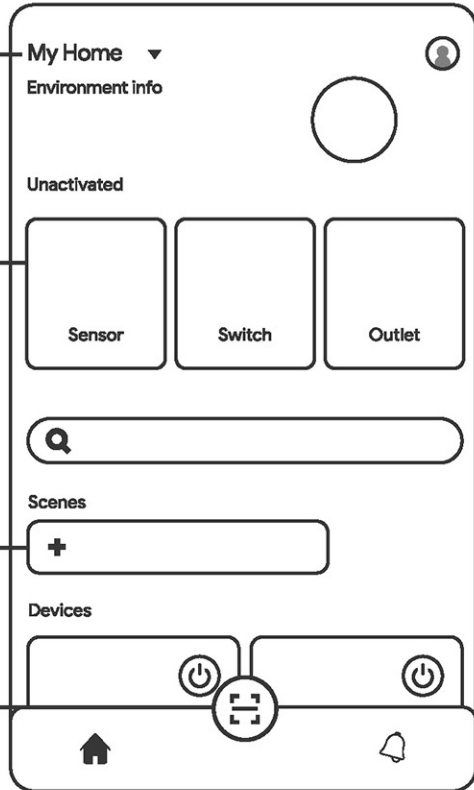


Change Wi-Fi Setting

Reset the device to default, then start the setup process over again.



Integrate Google Service

1. Download the “Google Home” App from the App Store or the Google Play Store > At the top right, tap your account > Verify that the Google account shown is the one linked to “Ultron Utility” App.
2. At the top left, tap [+] > [Set up device] > [Work with Google] > search and tap “UltronSMART” > Sign in to the app with the same Google account.

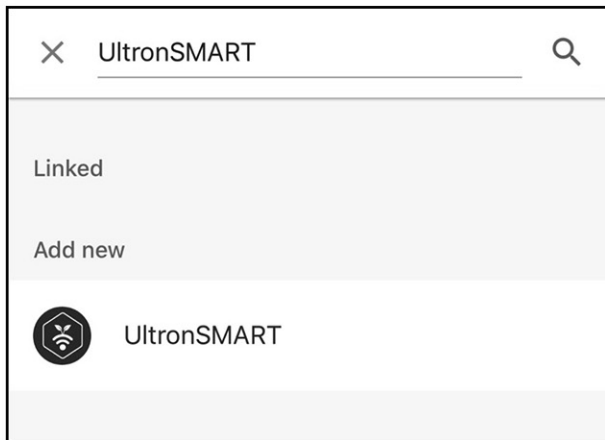

Google Play and the Google Play logo are trademarks of Google LLC.

App Store is trademarks of Apple Inc.

Interact with devices using your voice

We use “Fan” as an example in the following instructions. Please change the name of your devices depending on your current condition.


- 1. Download and open the “Google Assistant” App.**
- 2. Sign in with your Google Account, the one linked to the “Ultron Utility” App.**
 - **Control multiple devices at a time**
Say “Ok Google, turn on the fan.”
All fans will be turned on.
 - **Control specific device(s)**
Say “Ok Google, turn on the fan 1.”
and “Ok Google, turn on the fan 2.”
The fan 1 and 2 will be turned on accordingly.

(Need to name these two devices on the “Google Home” App ahead.)




Installation

- 1 Open the “Ultron Utility” App on your phone, scan the QR code on the AR-2 Wi-Fi Module.

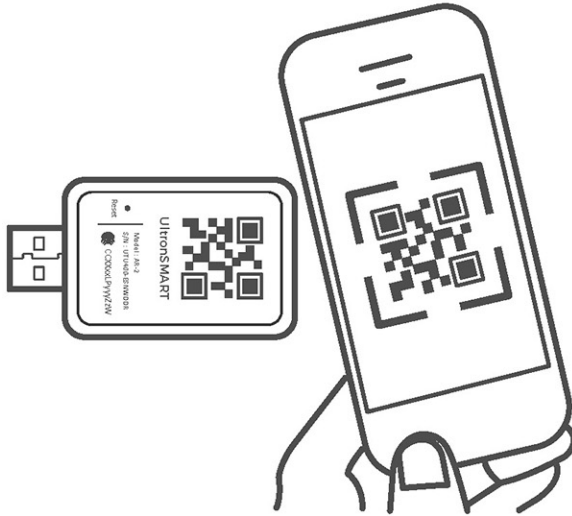


- 2 Remove the cover on the ALASKA product with the tool and keep it.

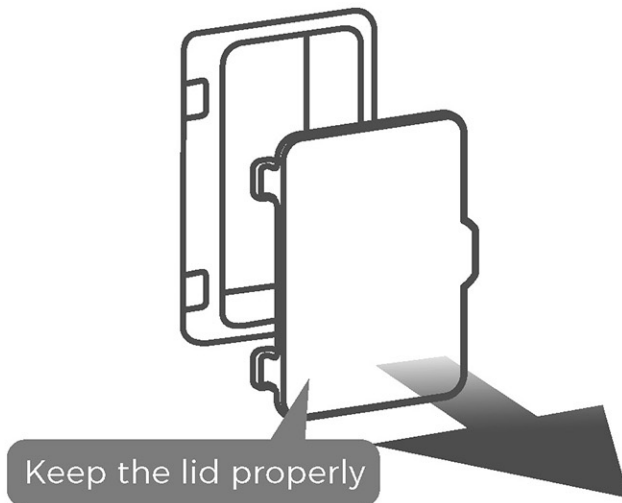


Installation

- 3 Plug the AR-2 Wi-Fi Module in the USB port, and put the cover back.

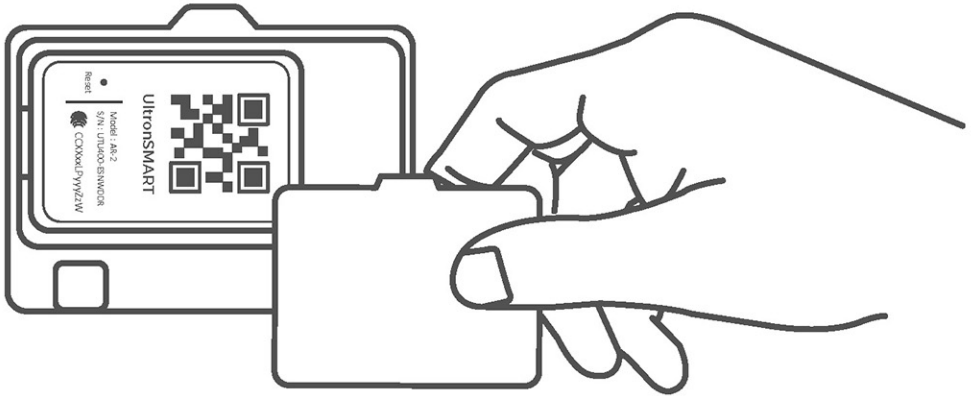


- 4 Complete the Wifi setting by following the remaining steps on the App, and you will be able to control the ALASKA product via App or voice.

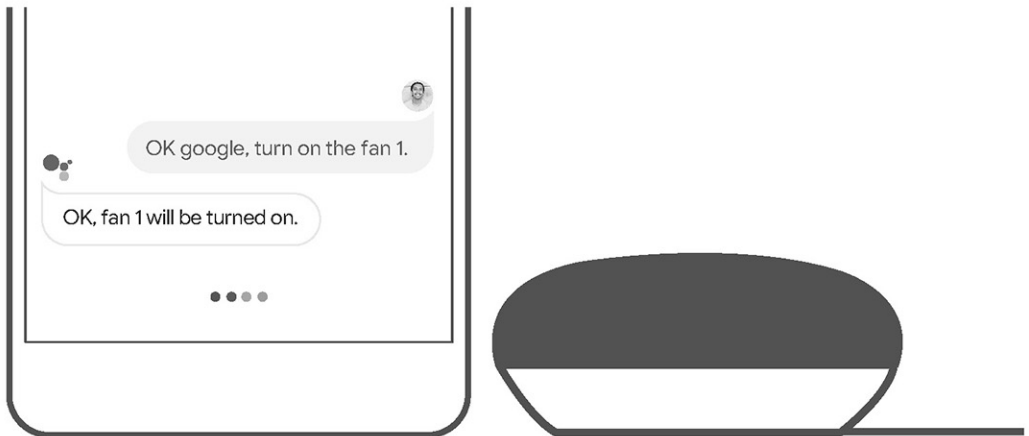

Light Signal (Setup Process)

Pulse (Orange Light):
Connecting Wi-Fi,
or Waiting for connection.

Solid (Green Light):
Connected to the Wi-Fi.

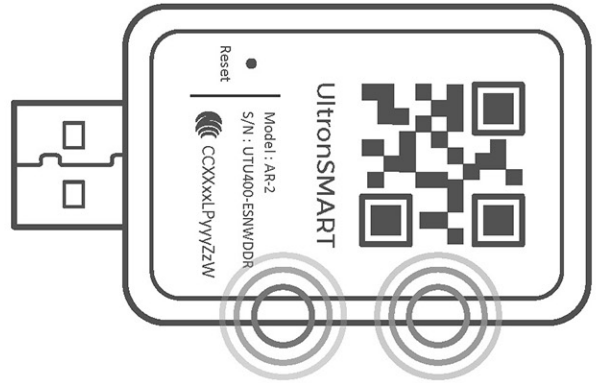


Light Signal (Reset)

Pulse (Orange and Green Light):
Resetting devices


Solid for 2 seconds (Orange Light):
Reset to default

*Verify the device is installed before
you start the reset process.

*The Wifi module(AR-2) must be
installed in the slot to reset.

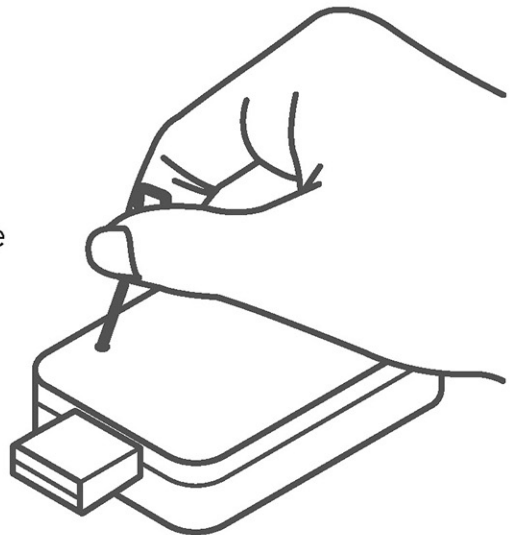

Delete Device from App

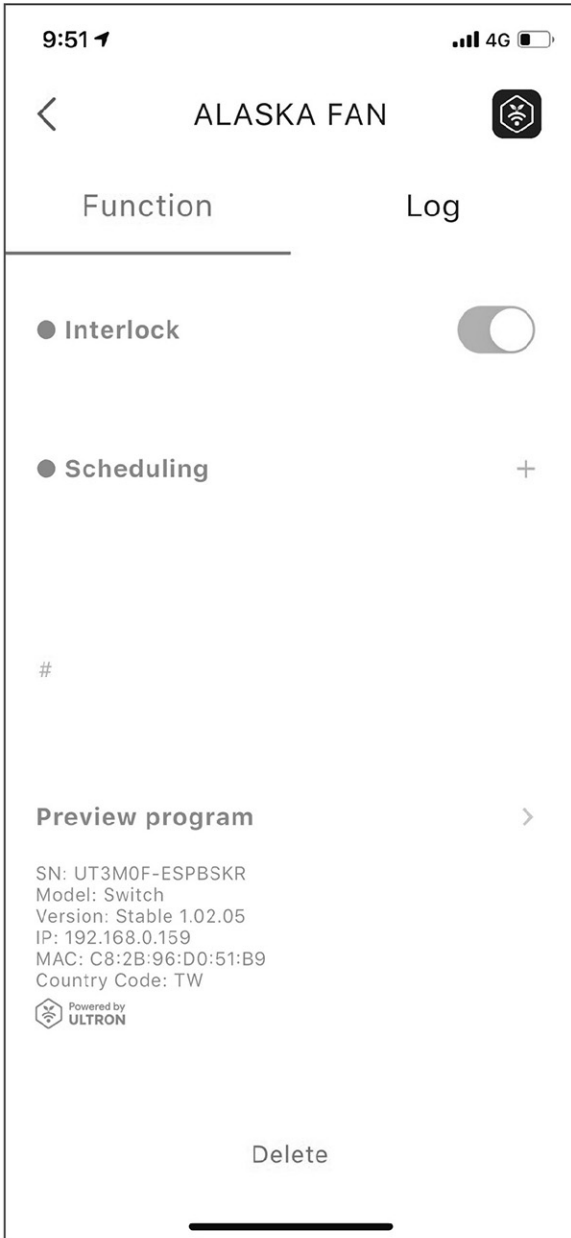

Specification

Model	AR-2
Net weight	15g
Dimension	81x72x30mm
Quantity	1set

After service

1. Thank you for purchasing our product(s). This warranty card provides 2-years warranty for main parts (fan motor) and 1-year basic warranty for general parts from the date of purchase. However, if one of the following circumstances occurs, the cost or service fee maybe charged during the warranty period.
2. The warranty card has not been registered on the company's website, or the warranty card has not been presented, or there is no date of purchase, or the seal of the distributor has not been stamped, or the proof of time of entry has not been presented.

Non-warranty

1. Damage is caused by inadvertent or incorrect use or failure to perform regular maintenance as required by this manual.
2. The user disassembles the product, modifies the product or uses non-original parts.
3. Damage is caused by natural disasters or force majeure.

* Post-Service Warranty

1. During the warranty period, the product is still warranted during the original warrantyperiod.
2. IF maintenance is conducted outside the warranty period, the repair parts are warranted for a period of three months.

Headquarters :

No.490, Shuiyuan Rd., Fengyuan Dist., Taichung City 420, Taiwan (R.O.C.)

TEL: +886-4-25222186

02000183-A1