 


# CirClean

AIR CIRCULATOR

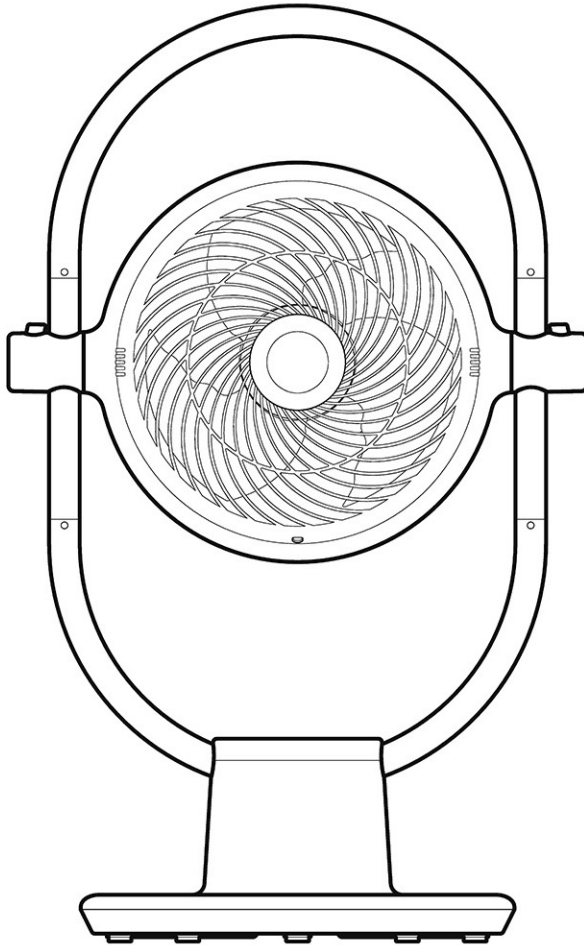

## CY-10 Operation Manual with Warranty Card



Please read this manual thoroughly before using and save it for future reference.

## CAUTION!

Before using this product, please read the safety instructions and follow all those regular safety precautions. To prevent the user or others from being harmed and to avoid property damage, the instructions as below must be followed.



The content of the pattern means to conceive of a situation that could result in death or serious injury. The sign indicates that it's "Forbidden", "Not Allowed"


- Do not insert any objects into the wire guard.
- Do not use in high-humidity environment, such as bathroom.
- Do not modify, repair or disassemble by yourself.
- Do not use it with wet hands.
- Do not use it without the wire guard.
- Do not install the product, where can be reached by baby or children.
- Children should be supervised to ensure that they do not play with the appliance.
- Confirm the power has been cut off before remove the wire guard.




The content of the pattern means to conceive of a situation that may cause injury or material damage. The sign indicates that it's "Compulsory" followed.

- Unplug the power cord from the socket if it will not be used for a period of time.
- It is recommended to clean the fan periodically to avoid vibration and damage caused by dirt.
- The general household voltage (AC110V) is suited for the unit. Do not use other voltages.
- This product is not intended for use by users(including children) who are mentally retarded or inexperienced, except under the supervision or direction of a person who is responsible for their safety.
- Do not drop it or place it in an unstable place or in front of an obstacle.
- If the product emits any abnormal noise or smell, stop using it immediately.
- If the power cord is damaged, it must be replaced by the manufacturer, service agent or similar qualified person in order to avoid hazards.

## PARTS LIST / SPECIFICATION

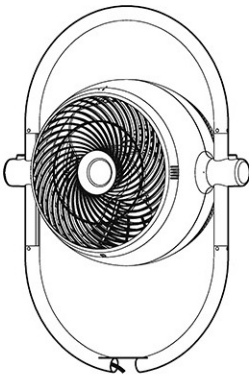


■ Fan Body

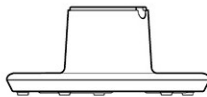

■ Base



■ Cover

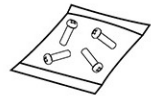

■ Mounting screw pack (M4x10L Screw x4)




■ User manual with warranty card


Voltage	AC 110V
Watt	Max. 27W
Revolution	1350RPM
Dimension	777(H) x 480(W) x 360(D) mm
Weight	5kg
Adjust Angle	45° downward ~ 90° upward

## ASSEMBLY

- 1** Take out the fan body and the base of the package.

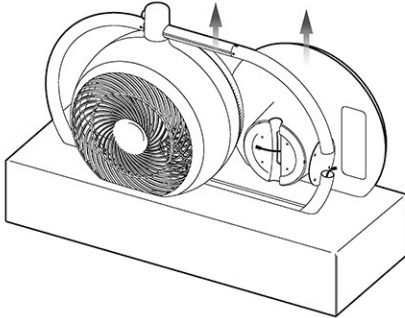


- 2** Connect the connector of fan body and the base, and put it in the base accordingly. Align the iron sheets with the base.

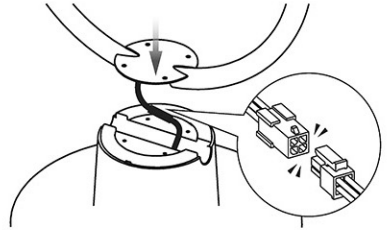

- 3** Use a Philip screw driver to lock the four screws. ( Please note that the guard is assembled at the same side of touch panel.)



- 4** Align the plastic cover with the latching position and press it up. (It's not easy to disassemble the plastic cover. Please make sure the screws are locked firmly.)

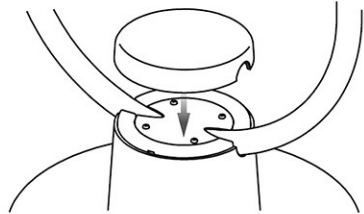

## PANEL OPERATION

### SMART

When the blue light is on, it represents the fan is successfully linked to the Wi-Fi.


### Airflow / Natural mode

There are 7 airflow and natural mode options available. "A" means natural mode. The green light represents the current airflow.

### Clean filter indicator

When the orange light is on, it represents 3000 hrs usage of it. Please clean or change a new filter to obtain better filter efficiency.

\*When the orange light is on, touch "TIMER ON" for three Sec. to clear the light and the time will be reset.

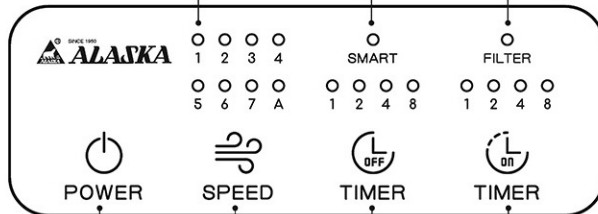

### Power switch

Power ON/OFF

### Airflow switch button

Switch the airflow

\*Touch the button to change speed from 1 to 7 low to high. When it's in natural mode, it turns to be the lowest speed when you touch the button again.

### Timer OFF

Auto Turn off

\*Each time you touch the button can increase 1hr. When the timer shows 8hrs, the timer will be cleared when you touch this button again.

### Timer ON

Auto Turn on

\*Each time you touch the button can increase 1hr. When the timer shows 8hrs, the timer will be cleared when you touch this button again.



## ADJUST THE ANGLE

7 steps adjustment from 45 degrees downward to 90 degrees upward.



\*Please do not force to adjust the angle beyond the movable area, which will cause damage.



45 degrees downward

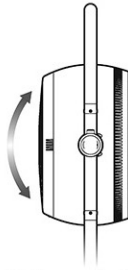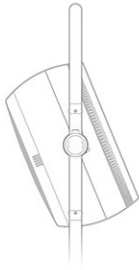

7 steps adjustment

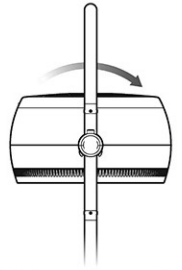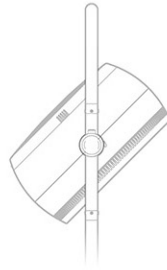


90 degrees upward



## ADJUST THE HEIGHT

No-step adjustment of fan body within 15cm.

\*Please do not force to adjust the height beyond the movable area, which will cause damage.

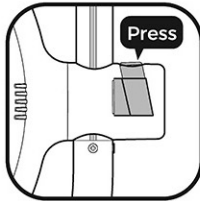


You can adjust the height by pressing down the button on the left and right side simultaneously.

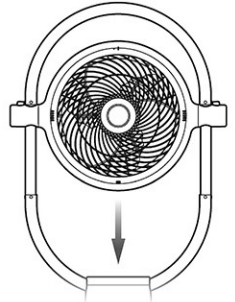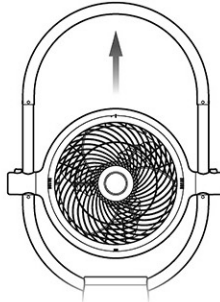


## MAINTENANCE



- 1 Use a Phillips screw driver to remove the screw below the airflow grille and keep it.

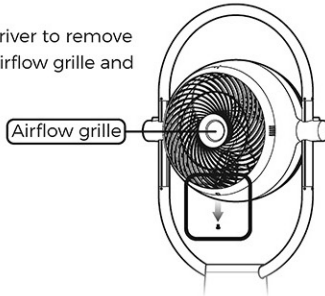



- 2 Turn the airflow grille clockwise to remove it.

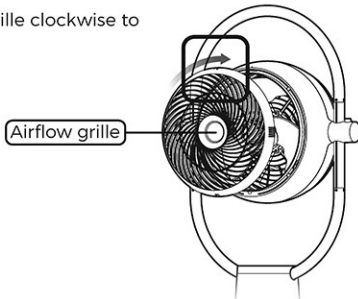



- 3** Turn the airflow grille cap clockwise to take out the fan blade.

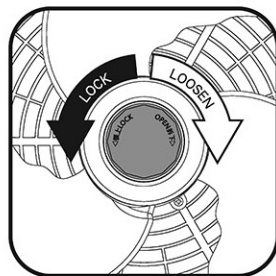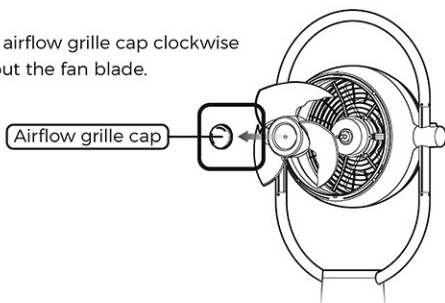

- 4** Turn the Nylon filter counterclockwise to remove the Nylon filter.

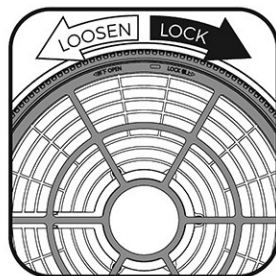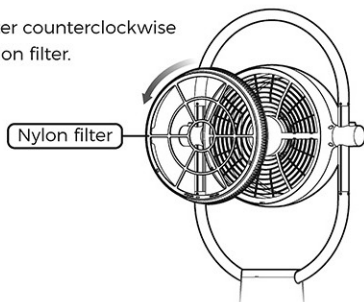

- 5** Follow the inverted sequence of disassembly step after maintenance.  
(Please note that when install the Nylon filter, please align the location bump with the slot. After the filter is fully embedded in the fan body, you can lock it clockwise.)

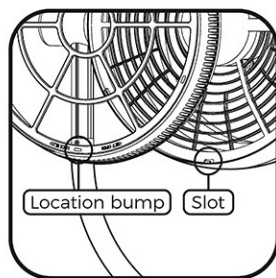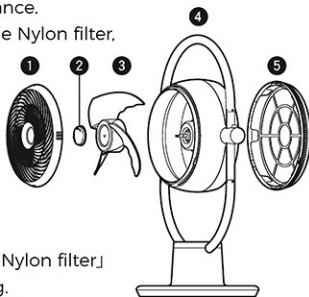

#### The maintenance of each part

「**1** Airflow grille」 「**3** Fan blade」 「**5** Nylon filter」 are allowed to use water for cleaning.


Please wipe 「**2** Airflow grille cap」 and 「**4** Fan body」 with a dry cloth. (Do not use any liquid to clean.)

## TROUBLESHOOTING


Problem	Check	Solution
It is powered but is not operating	Is the power supply connected correctly?	Check wiring, power supply
	Whether the circuit breaker is burnt out.	Check the circuit breaker
Abnormal sound and vibration during operation.	Whether the unit is placed in a stable area.	Check the installation position
	Whether the airflow grille cap loosens.	Retighten it again
	The bearing of the motor is broken.	Ask the dealer to repair it
	The dust is too much on the surface.	Clean and maintenance
There' s a burning smell	Whether using the unit in a high humidity place.	Ask the dealer to repair it

## Wi-Fi MODULE SETUP



- 1 Lean the fan and expose the base, you will see a lid on the base. Remove the lid and keep it properly.

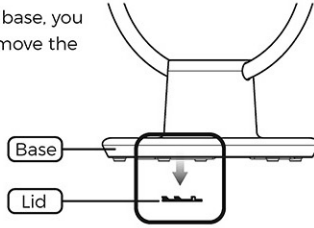


- 2 Open the "Ultron Utility" App on your phone, scan the QR code on the AR-2 Wi-Fi Module. (Detailed procedure please follow the instruction of AR-2.)

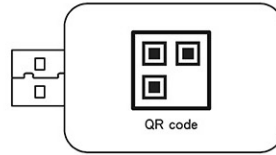

- 3 Plug the Wi-Fi module (AR-2) to the slot and cover the lid.

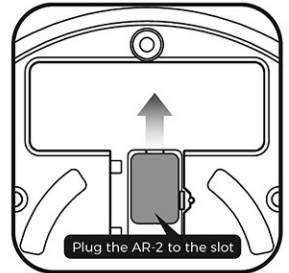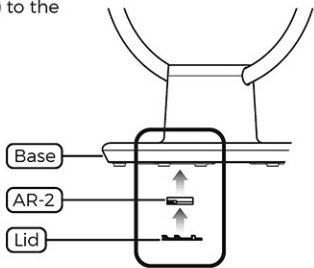

- 4 The indicator will keep in blue when connect to the internet successfully. And you will be able to use APP or voice to operate.

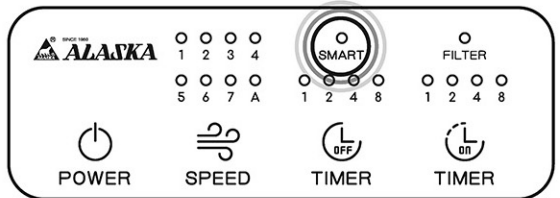

## VOICE CONTROL ITEM

Remark: The underline content will vary according to different naming from users.

Circumstances	Voice control (the proposed way of command)
Power ON/OFF	Turn on /off the <u>Air Circulator</u>
Circulate airflow	Turn on the <u>Air Circulator</u> in speed one
	⋮
	Turn on the <u>Air Circulator</u> in speed seven Turn on the <u>Air Circulator</u> in Auto speed
Timer ON/OFF	Turn on the <u>Air Circulator</u> Timer off from 1 to 8 hrs Turn on the <u>Air Circulator</u> , cancel the timer off
	Turn on the <u>Air Circulator</u> Timer on from 1 to 8 hrs Turn on the <u>Air Circulator</u> , cancel the timer on

## Set up your device

Wi-Fi Module is referred to as "device" in the following sections.


1. Download the "Ultron Utility" App from the App Store or the Google Play Store.



2. Sign in with your Google Account > Create [Location Name] > Tap [Scanning Button] in the bottom of the Dashboard > Scan the QR code on the device.
3. Make sure the device is installed > Back to the App Dashboard, complete the Wifi setting by following the remaining steps on the App.
4. The device is connected to the network when the device icon has moved from [Unactivated Area] to [Devices]. The LED light of the device also visually illustrates its status; the device is connected when the light turns green steadily.


## Integrate Google Service

1. Download the "Google Home" App from the App Store or the Google Play Store > At the top right, tap your account > Verify that the Google account shown is the one linked to "Ultron Utility" App.
2. At the top left, tap [+] > [Set up device] > [Work with Google] > search and tap "UltronSMART" > Sign in to the app with the same Google account.

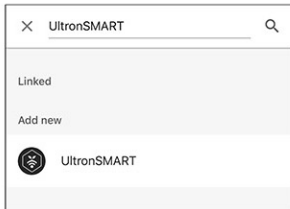

Google Play and the Google Play logo are trademarks of Google LLC.  
App Store is trademarks of Apple Inc.

## App Dashboard

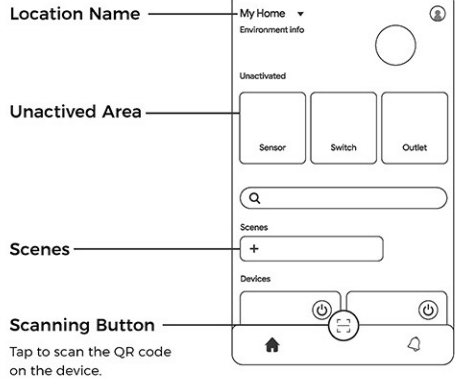 

## Change Wi-Fi Setting

Reset the device to default, then start the setup process over again.



## Voice user interface

We use "Fan" as an example in the following instructions. Please change the name of your devices depending on your current condition.

1. Download and open the "Google Assistant" App.
2. Sign in with your Google Account, the one linked to the "Ultron Utility" App.
  - Control multiple devices at a time  
Say "Ok Google, turn on the fan."  
All fans will be turned on.
  - Control specific device(s)  
Say "Ok Google, turn on the velocity fan 1."  
and "Ok Google, turn on the velocity fan 2."  
The velocity fan 1 and 2 will be turned on accordingly.  
(Need to name these two devices on the "Google Home" App ahead.)



## Warranty Card

Purchase Date	Date :	Production Serial No.	
Store Stamp		<p>Thank you for purchasing our product(s). This warranty card provides 2-years warranty for main parts (fan motor) and 1-year basic warranty for general parts from the date of purchase. However, if one of the following circumstances occurs, the cost or service fee may be charged during the warranty period.</p> <ol style="list-style-type: none"> <li>1.The main parts are fan motors, and parts other than the main parts are all classified as general parts.</li> <li>2.The warranty card has not been registered on the company's website, or the warranty card has not been presented, or there is no date of purchase, or the seal of the distributor has not been stamped, or the proof of time of entry has not been presented.</li> <li>3. Damage is caused by inadvertent or incorrect use or failure to perform regular maintenance as required by this manual.</li> <li>4.The user disassembles the product, modifies the product or uses non-original parts.</li> <li>5. Damage is caused by natural disasters or force majeure.</li> </ol> <p>※Post-Service Warranty</p> <ol style="list-style-type: none"> <li>1. During the warranty period, the product is still warranted during the original warranty period.</li> <li>2. If maintenance is conducted outside the warranty period, therepair parts are warranted for a period of three months.</li> </ol> <p>※The use and installation instructions must be delivered to the user.</p> <ul style="list-style-type: none"> <li>● The method of installation is very important. Please entrust the vendor shop or plumbing and electricity shop to install.</li> <li>● If the electric wires are damaged, it only can be replaced by manufacturer oragency or plumbers to do it in order to avoid danger.</li> </ul> <p>※It is strictly forbidden to install this product in a place filled with airborne grease and room temperature up to 40 °C (above). You're at your own risk if you do this to damage this product.</p>	